

JRG

+GF+


JRG Valves

JRGUTHERM 2T

**Thermostatic circulation controller
with shut-off valve**



Construction

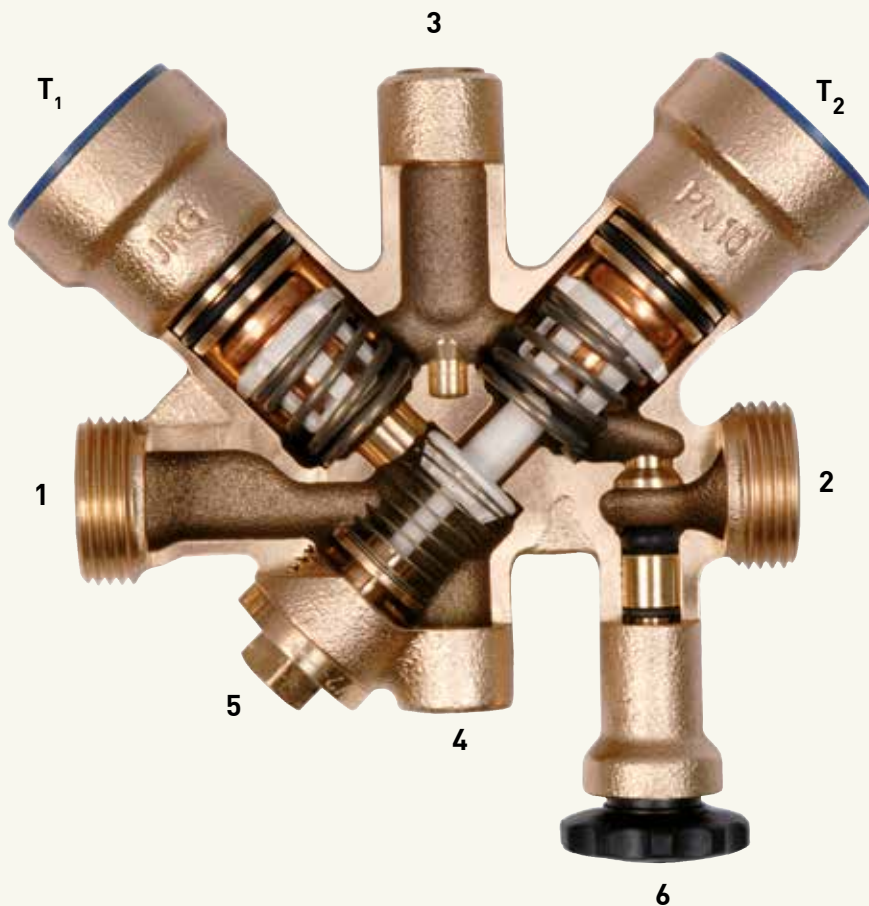

- T_1 Hot water valve
- T_2 Disinfection valve
- 1 Primary connection
- 2 Secondary connection
- 3 Connection for thermometer/
PT 1000 temperature sensor
- 4 Connection for drain/sample
valve
- 5 Plug for basic volume bore
- 6 Shut-off valve

+ Planning instruction

Even with self-regulatory circulation controllers such as the JRGUTHERM 2T, a simplified design of the installation is possible.

Recommended temperature spreading between the water heater and the JRGUTHERM 2T is 2-5 K.

In order to select the suitable circulation pump, the discharge flow of the entire system has to be determined. The pressure loss of the JRGUTHERM 2T is measured on the k_{Vmax} line on the diagram. The regulators in the remaining pipe lines are to be selected in such a way that the intersection of the flow rate and the required pressure drop lies within the interpretation field.

A JRGUTHERM 2T is to be integrated into all circulation loops.

If there is any danger of the water flowing through the JRGUTHERM 2T controller in the wrong direction, this is to be avoided by the installation of suitable non-return valves. We recommend the installation of JRG Code 8208 screw connections with non-return valves.

In case of queries with regard to technical compatibility, please feel free to contact our Technical Sales Advisers or Our Technical Customer Service.

Function

The JRGUTHERM 2T circulation controller regulates the volume flow in normal as well as in disinfection operation mode by permanently sensing the water temperature with a thermostat. Hydraulic calibration is automatically effected through thermal calibration.

Materials

All water-bearing parts are made of gunmetal, copper, stainless steel or high quality plastic, seals are made of EPDM.

Installation position

The JRGUTHERM 2T circulation controller can be installed in any position. By using the appropriate threaded shut-off valves, non-return and shut-off valves can be directly integrated.

For revision purposes, we recommend installing shutoff valves, JRG Code 8339, before and after the circulation controller.

Area of application

The JRGUTHERM 2T is a thermostatic circulation controller for heated drinking water which regulates circulation in normal as well as in disinfection operation mode.

Setting range T ₁ (hot water temperature)	35-60°C
Setting range T ₂ (disinfection temperature)	Skala 0-5 (≈70-75°C)
Maximum temperature load	90°C
Maximum operating pressure	PN 10
Maximum differential pressure	40 kPa (0,4 bar)

The JRGUTHERM 2T flow regulator is protected from over-heating.

The circulation controller may not be used in gravity circulation systems.

Certification pending.


Technical changes remain reserved at all times.

+ Advantages

- Simple flow calculations
- No setting-up calculations
- Two temperatures, two thermostats
- Automatic hydraulic balance, thermostatically controlled
- Energy saving thanks to minute balance
- Controlled through seat valve
- Large temperature setting range
- Operates without external power
- Basic volume bore exchangeable
- Basic volume bore inactive during disinfection



Control characteristics

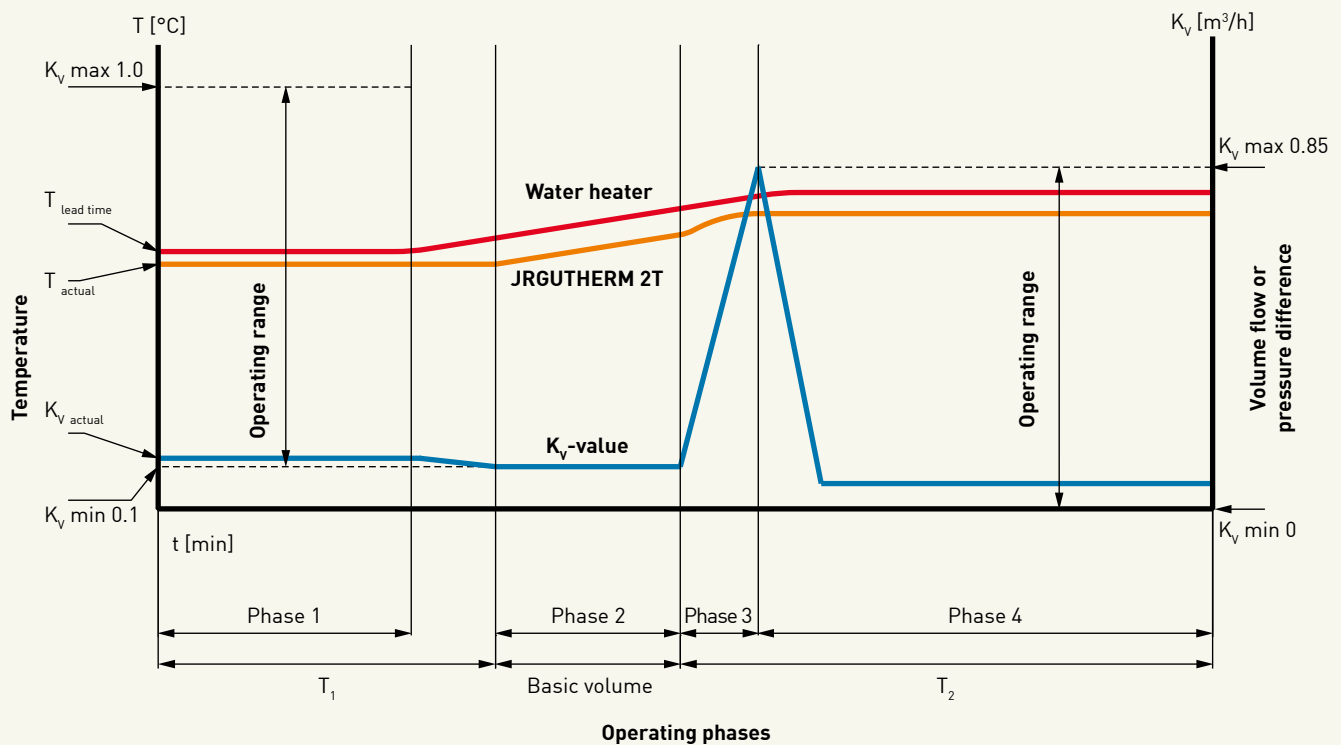

Control characteristics with factory-set target temperature:

T_1 -hot water temperature 58°C (range: 35-60°C)


T_2 -disinfection 70°C (range: 70-75°C)

Operating phases


Description of control characteristics

1	The hot water temperature is controlled. The thermostat T_1 regulates the calibration temperature according to factory-set value of 58°C.
2	An increased hot water temperature supply to the JRGUTHERM 2T triggers a disinfection.
3	With factory settings the conversion is started at 66°C, the valve temporarily opens to the maximum KV value T_2 . Disinfection starts and the calibration.
4	The disinfection temperature is set according to the pre-set calibration temperature T_2 . Heat output and the required amount of water are coordinated and thus the thermal calibration is automatically controlled. The basic bore is set to inactive and the water volume is reduced to the required volume flow.

Nomogram

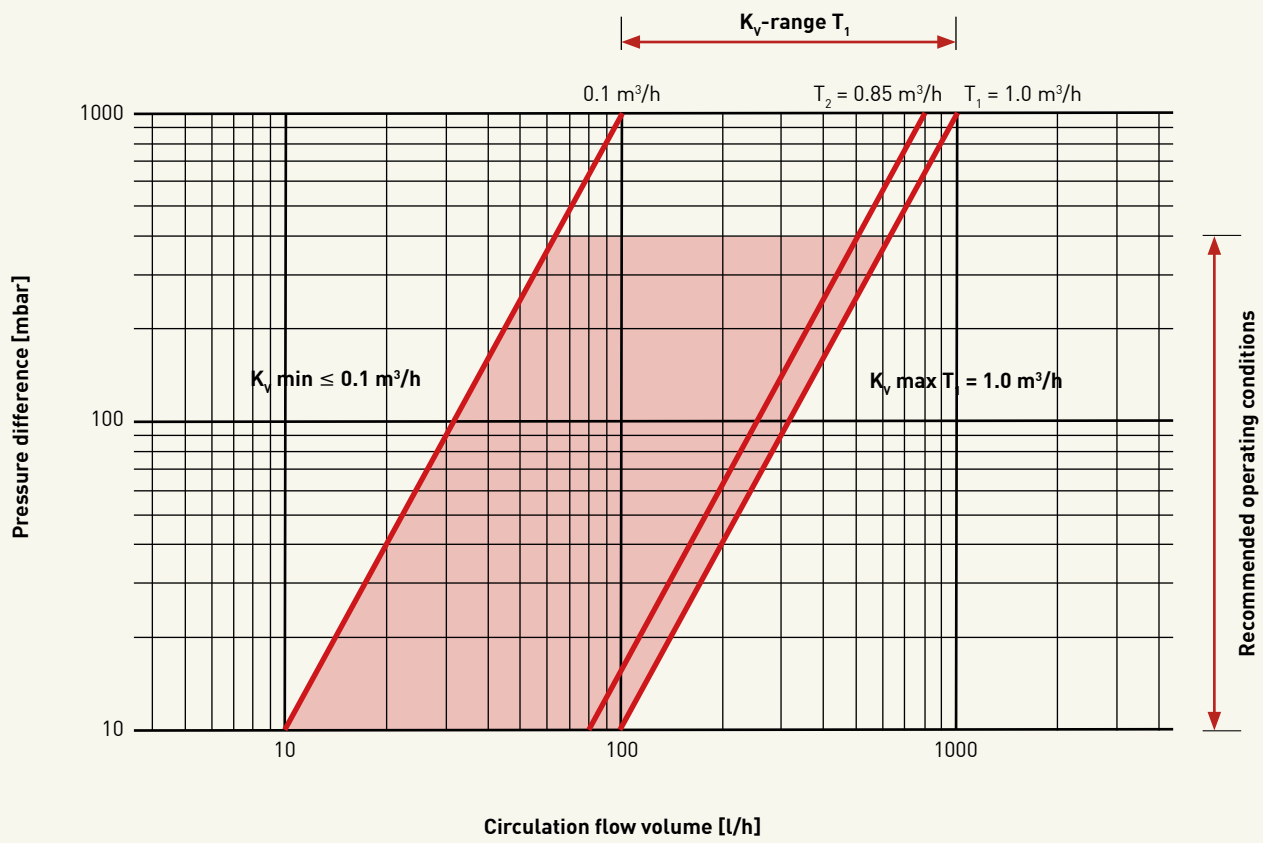


Installation example

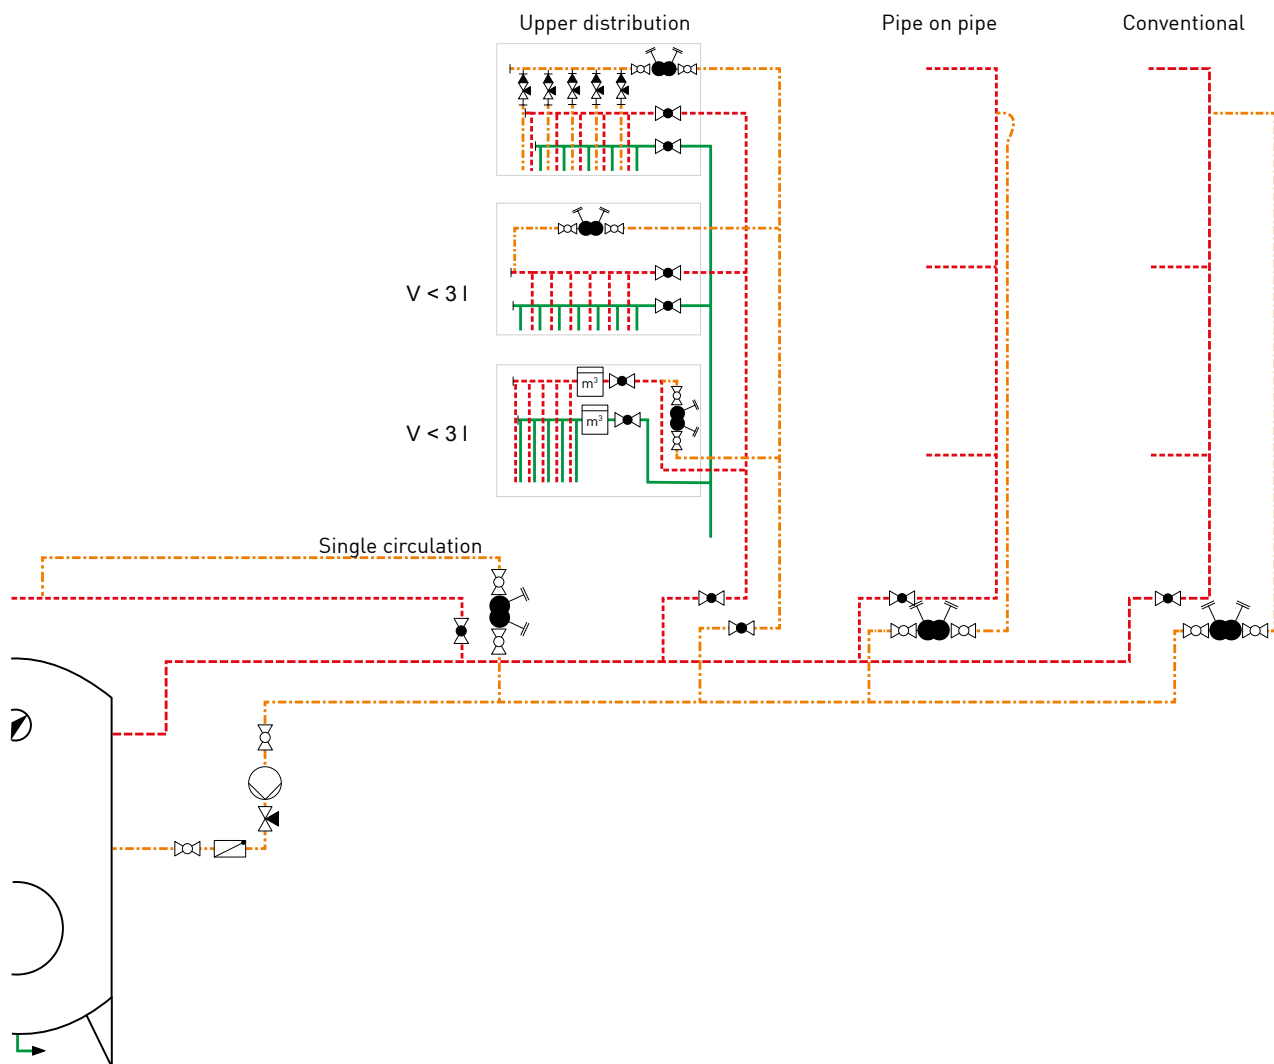

DIN	Text	JRG Code	
	TWK – Cold water – WKR		
	TWW – Hot water – WWV		
	TWZ – circulation WW – WWR		
	Stop valve	5200-34	
	Non-return valve	1610-15	
	Swing check valve	1682	
	Adjustable socket	6310	
	JRGUTHERM 2T circulation controller	6325	
	Circulation pump		
	Drain valve	6000-12	
	Circulation collector		
	Water meter	5450	
	Ball valve	6020/23	

JRGUTHERM 2T/Accessories

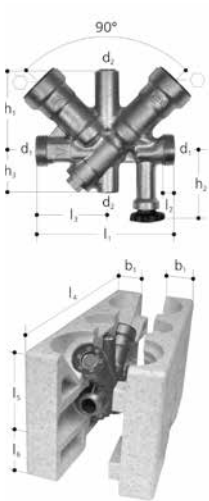


JRGUTHERM 2T Circulation Controller, PN 10

- Temperature: max. 90°C
- Material: gunmetal
- Connection: male thread

GN (inch)	DN (mm)	JRG Code	GF Code	Weight (kg)
½	15	6325.015	350 831 421	1.033
¾	20	6325.020	350 831 422	1.110


GN (inch)	DN (mm)	b1 (mm)	d1 G (inch)	d2 (inch)	h1 (mm)	h2 (mm)	h3 (mm)	l1 (mm)	l2 (mm)	l3 (mm)	l4 (mm)	l5 (mm)	l6 (mm)	⬡
½	15	37	¾	¼	64	57	33	110	6	57	260	82	61	4
¾	20	37	1	¼	64	57	33	123	7	64	260	82	61	4

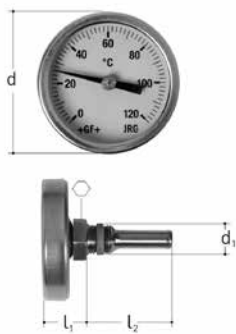

Thermometer

- Description: to 3500, 3510, 6325
- Material: stainless steel

GN (inch)	DN (mm)	JRG Code	GF Code	Weight (kg)	d (mm)	d1 G (inch)	l1 (mm)	l2 (mm)	⬡
¼	8	8349.080	350 830 191	0.080	52	¼	19	35	17

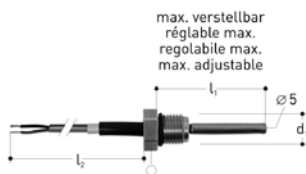


Temperature sensor PT 1000, PN 10

- Temperature: max. 0 - 105°C

GN (inch)	DN (mm)	JRG Code	GF Code	Weight (kg)	d1 G (inch)	l1 (mm)	l2 (mm)	⬡
¼	8	6326.001	350 830 182	0.072	¼	46	1000	16

Accessories/Unions

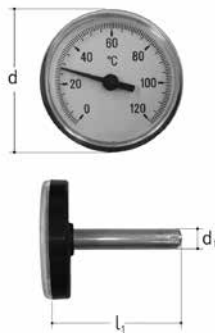

Thermometer

- Description: to 8348.080
- Material: brass, plastic

d (mm)	JRG Code	GF Code	Weight (kg)	d1 (mm)	l1 (mm)
52	8348.001	350 830 194	0.030	9	62



Sleeve

- Description: to 8348.001
- Material: stainless steel, EPDM

GN (inch)	JRG Code	GF Code	Weight (kg)	d1 G (inch)	d2 (mm)	l1 (mm)	l2 (mm)	⬡
1/4	8348.080	350 830 192	0.030	1/4	9	15	35	13




JRG LegioStop Drain cock, PN 16

- Temperature: max. 90°C (adjustable to 45°C)
- Material: brass
- Connection: male thread
- * to 5120

GN (inch)	DN (mm)	JRG Code	GF Code	Weight (kg)	d1 R (inch)	d2 (mm)	d3 (mm)	h (mm)	l (mm)	l1 (mm)	l2 (mm)
1/4	8	7301.080	350 896 020	0.053	1/4	30	14	45	46	25	38

Accessories/Unions

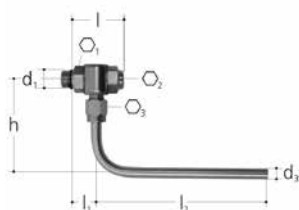


Sampling valve, PN 16

- Description: for microbiological water analysis with temperature indicator
- Temperature: max. 90°C
- Material: gunmetal, stainless steel, EPDM
- Connection: male thread

GN (inch)	DN (mm)	JRG Code	GF Code	Weight (kg)
1/4	8	7306.080	351 110 365	0.190

GN (inch)	DN (mm)	d1 R (inch)	d3 (mm)	h (mm)	l (mm)	l1 (mm)	l2 (mm)	○1	○3	○2
1/4	8	1/4	8	65	35	16	125	20	14	5

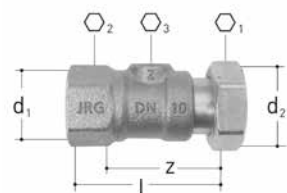

Union, PN 10

- Description: to 3600, 6320, 6325
- Temperature: max. 90°C
- Connection: female thread
- Consisting of: ball valve, lockable, loose nut

GN (inch)	DN (mm)	JRG Code	GF Code	Weight (kg)	d1 Rp (inch)	d2 G (inch)	l (mm)	○1	○2	○3	z (mm)
1/2	15	8339.240	350 887 710	0.170	1/2	3/4	55	30	27	6	43
3/4	20	8339.320	350 887 911	0.260	3/4	1	55	37	32	6	47



Union with non return valve

- Material: brass, plastic, EPDM
- Connection: male thread

GN (inch)	DN (mm)	JRG Code	GF Code	Weight (kg)	d1 R (inch)	d2 G (inch)	l (mm)	l1 (mm)	l2 (mm)	z (mm)	○1	○2
1/2	15	8208.240	351 055 901	0.090	1/2	3/4	40	34	6	19	30	19
3/4	20	8208.320	351 056 001	0.150	3/4	1	44	37	7	20	37	24

Adjustment/Setting ranges

Setting up the circulation controller

In principle, all circulation controllers built into the system must be adjusted to the same values.

A stepless adjustment is possible.

The adjustment values are shown in the tables 1 and 2.

The individual circulation lines are automatically calibrated.

Transport packaging



After installation and adjustment, the transport packaging of the JRGUTHERM 2T circulation controller is used as thermal insulation.

- Thermal conductivity $\lambda_D = 0.033 \text{ W/mK}$
- Fire behavior (BKZ) 5.1/B1
- Application temperature $\leq 90^\circ\text{C}$

Adjusting the circulation controller

Changing the factory settings is at the sole responsibility of the performer.

The factory settings of the JRGUTHERM 2T circulation controller can be changed as follows:

Remove the sealing cap and apply Allen key to the respective hexagon socket – either T_1 for hot water temperature or T_2 for disinfection temperature.

Turn the key clockwise to reduce and turn it counter-clockwise to increase the temperature.

Don't exceed the stop (minimum/maximum) when adjusting the temperature.



Adjustment/Setting ranges

Setting ranges

Table 1: Calibration temperature T_1 (hot water)

Setting [°C]	Minimal water temperature water heater [°C]	Maximal water temperature water heater [°C]
35	38	40
40	43	45
45	48	50
50	53	55
55	58	60
58 (factory setting)	61	63
60	63	65

Table 2: Calibration temperature T_2 (thermal disinfection)

Scale setting	Corresponds to disinfection temperature [°C]	Start temperature disinfection [°C]	Minimal water temperature water heater [°C]
0 (factory setting)	~ 70	66	≥ 75
1	~ 71	67	≥ 76
2	~ 72	68	≥ 77
3	~ 73	69	≥ 78
4	~ 74	70	≥ 79
5	~ 75	71	≥ 80

Maintenance

- The JRGUTHERM 2T is maintenance-free.
- The mounting and operating instruction delivered with the valve, has to be handed over to the building owner.

Worldwide at home

Our sales companies and representatives ensure local customer support in over 100 countries.

www.gfps.com

Argentina / Southern South America

Georg Fischer Central Plastics Sudamérica S.R.L.
Buenos Aires, Argentina
Phone +54 11 4512 02 90
Fax +54 11 4512 02 93
gfcentral.ps.ar@georgfischer.com
www.gfps.com/ar

Australia

George Fischer Pty Ltd
Riverwood NSW 2210
Phone +61 (0) 2 9502 8000
Fax +61 (0) 2 9502 8090
australia.ps@georgfischer.com
www.gfps.com/au

Austria

Georg Fischer Rohrleitungssysteme GmbH
3130 Herzogenburg
Phone +43 (0) 2782 856 43 0
Fax +43 (0) 2782 856 64
austria.ps@georgfischer.com
www.gfps.com/at

Belgium / Luxembourg

Georg Fischer NV/SA
1600 Sint-Pieters-Leeuw / Belgium
Phone +32 (0) 2 556 40 20
Fax +32 (0) 2 524 34 26
be.ps@georgfischer.com
www.gfps.com/be

Brazil

Georg Fischer Sist. de Tub. Ltda.
04571-020 São Paulo/SP
Phone +55 (0) 11 5525 1311
br.ps@georgfischer.com
www.gfps.com/br

Canada

Georg Fischer Piping Systems Ltd
Mississauga, ON L5T 2B2
Phone +1 (905) 670 8005
Fax +1 (905) 670 8513
ca.ps@georgfischer.com
www.gfps.com/ca

China

Georg Fischer Piping Systems Ltd
201319 Shanghai
Phone +86 21 3899 3899
Fax +86 21 3899 3888
china.ps@georgfischer.com
www.gfps.com/cn

Denmark / Iceland

Georg Fischer A/S
2630 Taastrup, Denmark
Phone +45 (0) 7022 1975
Fax +45 (0) 7022 1976
info.dk.ps@georgfischer.com
www.gfps.com/dk

Finland

Georg Fischer AB
01510 Vantaa
Phone +358 (0) 9 586 58 25
Fax +358 (0) 9 586 58 29
info.fi.ps@georgfischer.com
www.gfps.com/fi

France

Georg Fischer SAS
95932 Roissy Charles de Gaulle Cedex
Phone +33 (0) 1 41 84 68 84
Fax +33 (0) 1 41 84 68 85
fr.ps@georgfischer.com
www.gfps.com/fr

Germany

Georg Fischer GmbH
73095 Albershausen
Phone +49 (0) 7161 302 0
Fax +49 (0) 7161 302 25 9
info.de.ps@georgfischer.com
www.gfps.com/de

India

Georg Fischer Piping Systems Pvt. Ltd.
400 076 Powai, Mumbai
Phone +91 22 4007 2000
Fax +91 22 4007 2020
branchoffice@georgfischer.com
www.gfps.com/in

Indonesia

George Fischer Pte Ltd
41371 Jawa Barat
Phone +62 267 432 044
Fax +62 267 431 857
indonesia.ps@georgfischer.com
www.gfps.com/id

Italy

Georg Fischer S.p.A.
20063 Cernusco S/N (MI)
Phone +39 02 921 86 1
Fax +39 02 921 86 24 7
it.ps@georgfischer.com
www.gfps.com/it

Japan

Georg Fischer Ltd
530-0003 Osaka
Phone +81 (0) 6 6341 2451
jp.ps@georgfischer.com
www.gfps.com/jp

Korea

Georg Fischer Piping Systems
463-824 Seoul
Phone +82 31 8017 1450 3
Fax +82 31 8017 1454
kor.ps@georgfischer.com
www.gfps.com/kr

Malaysia

George Fischer (M) Sdn. Bhd.
40460 Shah Alam, Selangor Darul Ehsan
Phone +60 (0) 3 5122 5585
Fax +60 (0) 3 5122 5575
my.ps@georgfischer.com
www.gfps.com/my

Mexico / Northern Latin America

Georg Fischer S.A. de C.V.
Apodaca, Nuevo Leon, Mexico
Phone +52 (81) 1340 8586
Fax +52 (81) 1522 8906
mx.ps@georgfischer.com
www.gfps.com/mx

Middle East

Georg Fischer Piping Systems (Switzerland) Ltd
Dubai, United Arab Emirates
Phone +971 4 289 49 60
Fax +971 4 289 49 57
gss.ps@georgfischer.com
www.gfps.com/int

Netherlands

Georg Fischer N.V.
8161 PA Epe
Phone +31 (0) 578 678 222
Fax +31 (0) 578 621 768
nl.ps@georgfischer.com
www.gfps.com/nl

New Zealand

Georg Fischer Ltd
5140 Upper Hutt
Phone +64 (0) 4 527 9813
Fax +64 (0) 4 527 9834
nz.ps@georgfischer.com
www.gfps.com/nz

Norway

Georg Fischer AS
1351 Rud
Phone +47 67 18 29 00
Fax +47 67 13 92 92
no.ps@georgfischer.com
www.gfps.com/no

Philippines

Georg Fischer Representative Office
1604 Pasig City
Phone +632 571 2365
Fax +632 571 2368
sgp.ps@georgfischer.com
www.gfps.com/sg

Poland

Georg Fischer Sp. z o.o.
05 090 Sekocin Nowy
Phone +48 (0) 22 3131 050
Fax +48 (0) 22 3131 060
poland.ps@georgfischer.com
www.gfps.com/pl

Romania

Georg Fischer Rohrleitungssysteme (Elvetia)
S.A. SUCURSALA BUCURESTI
020257 Bucuresti
Phone +40 311 040 492
Fax +40 212 317 479
ro.ps@georgfischer.com
www.gfps.com/int

Russia

Georg Fischer Piping Systems (Switzerland) Ltd
Moscow Representative Office
125040 Moscow
Phone +7 495 748 11 44
ru.ps@georgfischer.com
www.gfps.com/ru

Singapore

George Fischer Pte Ltd
528 872 Singapore
Phone +65 6747 0611
Fax +65 6747 05 77
sgp.ps@georgfischer.com
www.gfps.com/sg

Spain / Portugal

Georg Fischer S.A.
28046 Madrid
Phone +34 (0) 91 781 98 90
Fax +34 (0) 91 426 08 23
es.ps@georgfischer.com
www.gfps.com/es

Sweden

Georg Fischer AB
11743 Stockholm
Phone +46 (0) 8 506 77 50 0
Fax +46 (0) 8 749 23 70
info.se.ps@georgfischer.com
www.gfps.com/se

Switzerland

Georg Fischer Rohrleitungssysteme (Schweiz) AG
8201 Schaffhausen
Phone +41 (0)52 631 3026
Fax +41 (0)52 631 2800
ch.ps@georgfischer.com
www.gfps.com/ch

Taiwan

Georg Fischer Co. Ltd.
24158 New Taipei City
Phone +886 2 8512 2822
Fax +886 2 8512 2823
tw@georgfischer.com
www.gfps.com/tw

Turkey

Georg Fischer Hakan Plastik
Boru ve Profil San. Tic. A.Ş.
59500 Cerkezkoy / Tekirdag
Phone +90 282 726 64 43
Fax +90 282 726 94 67
hpsales@hakan.com.tr
www.hakan.com.tr

United Kingdom / Ireland

Georg Fischer Sales Ltd
CV2 2ST Coventry, United Kingdom
Phone +44 (0) 2476 535 535
Fax +44 (0) 2476 530 450
uk.ps@georgfischer.com
www.gfps.com/uk

USA / Caribbean

Georg Fischer LLC
92618 Irvine
Phone +1 714 731 88 00
Fax +1 714 731 62 01
Toll Free 800/854 40 90
us.ps@georgfischer.com
www.gfps.com/us

International

Georg Fischer Piping Systems (Switzerland) Ltd
8201 Schaffhausen
Phone +41 (0) 52 631 3003
Fax +41 (0) 52 631 2893
info.export@georgfischer.com
www.gfps.com/int

Ident. Nr. 37 251 62 / 02.25 / ©Georg Fischer JRG AG

BFS Code 1161635_v1_02_2025
Production: GF BFS / SDE

The technical data are not binding. They neither constitute expressly warranted characteristics nor guaranteed properties nor a guaranteed durability. They are subject to modification. Our General Terms of Sale apply.

